









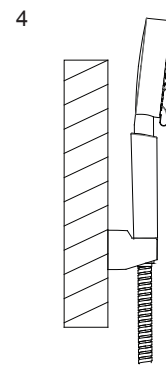
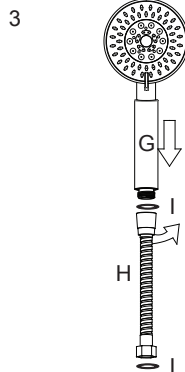
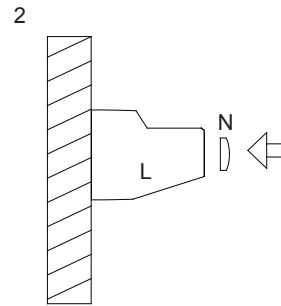
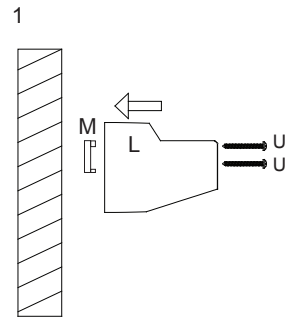
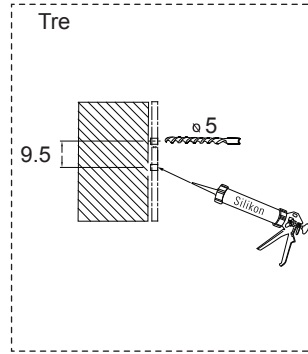
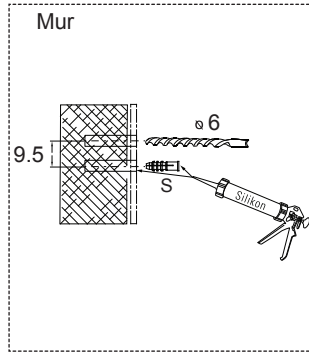












VikingBad Frida

Installasjon: Skruer

- G  x1
- H  x1
- I  x2
- L  x1
- M  x1
- N  x1
- ~~P  x1~~
- ~~Q  8mm x1~~
- S  6mm x2
- U  5x45 x2



Installasjon: Liming

- G  x1
- H  x1
- I  x2
- L  x1
- ~~M  x1~~
- N  x1
- P  x1
- Q  8mm x1
- ~~S  6mm x2~~
- ~~U  5x45 x2~~

